RSQ®
Since 1997 USA

KARAOKE PLAYER

User's Guide

MODEL:

RSQ MKP-2000

CONVERTING CDG DISC TO MP3G FILES
RECORD PLAYBACK
SONG CREATOR FUNCTION

Before operating this product,
please read these instructions

WARNING

WARNING: TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO PREVENT THE RISK OF ELECTRICK SHOCK, NO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

CAUTION:

To prevent electric shock, match wide blade of Plug to wide slot, fully insert.

This CD player is made and tested to meet Exacting safety standards. It meets FCC requirements and complies with safety performance standards of the U.S. Department of Health and Human services.

Warnings:

This CD player employs a laser light beam.Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.
-The use of controls, djustments, or procedures other than those specified herein might result in hazardous radiation exposure.

CAUTION:

This compact disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear panel.

CAUTION!

Invisible laser radiation when open and inter locks defeated. Avoid exposure to beam.

Double insulation
This is class II apparatus

COMPLIANCE WITH FCC REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a good ventilation environment.
16. WARNING： To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
17. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
18. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
19.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

20. ⧈ The apparatus is classified as class Ⅱ apparatus.

PRECAUTIONS FOR DISC

Placement

Put the unit where ventilation is good enough to prevent overheating. Never put the unit in direct sunlight or near heat sources.

Put the unit horizontally, never put any heavy object on the unit.

To protect the laser, do not put the unit where there is dust. If there is dust on the laser, use a cleaning disc before use.

Condensation

Water will appear on the pickup lens in the following cases:

The unit is suddenly moved from a cold place to a warm place.

The unit had been used in a humid place. In this case, the unit will not work. Unload the disc

Cleaning Disc

A defective or soiled disc inserted into the unit can cause sound to drop out during playback.

Handle the disc by holding its outer edges.

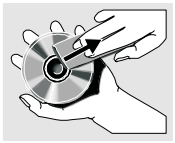

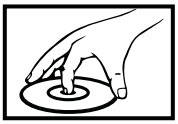

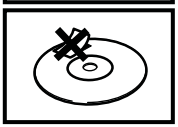

Do not touch the surface of the unlabeled side of the disc.

Do not stick paper of tape on the surface.

Do not expose the disc to direct sunlight or excessive heat.

Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.

NEVER use solvents such as benzine or alcohol to clean the disc.

Do not use irregular shape discs (example: heart shaped, octagonal, etc.). They may cause malfunctions.

Cleaning the unit

Be sure to turn the unit off and disconnect the AC cord before maintaining the unit.

Wipe the unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, then wipe with a dry cloth.

Never use alcohol, benzine, thinner fluid or other chemicals. Do NOT use compressed air to remove dust.

Important Note

Before transporting the unit, remove any disc from the disc compartment.

CONTENTS

Thank you for purchasing a RSQ MKP-2000 MP3+G/CD+G Karaoke system.
For operation and security,red this manual carefuiil and keep it handy for future reference.

TABLE OF CONTENTS

WARNING 01
IMPORTANT SAFETY INSTRUCTIONS 02
PREPARATIONS BEFORE OPERATION 03
CONTENTS 04
LOCATION OF CONTROLS ..... 05~07
FRONT PANEL 05
REMOTE CONTROL ..... 05~06
PUTTING BATTERIES IN THE REMOTE CONTROL 07
CONNECTIONS ..... 08~09
INSERTING FLASH DRIVE 08
CONNECTING TO AUDIO AND VIDEO COMPONENT 08
POWER CONNECTION 09
BASIC OPERATIONS ..... 10~11
PLAYING DISCS 10
KARAOKE MICROPHONE CONTROLS 10
KARAOKE 10
SKIPPING TRACKS 11
SEARCH PLAY 11
PROGRAMMED PLAY 11
REPEAT PLAY 11
VCD/SVCD/CD/CDG/MP3+G Karaoke disc 11
MP3/JPEG 11
REPEAT A SPECIFIC SECTION 11
FLIPPING AND ROTATING STILL PIC TURE 11
KARAOKE OPERATIONS ..... 12~16
KARAOKE PLAY 12
SONG SEARCH（MP3+G ONLY) 12
SONG RESERVATION 13
DIRECT ACCESS 13
RECORD A SONG ..... 13~14
RECORD PLAYBACK 14
RIPPING FUNCTION 15
CREATE SONG LIST 16
OTHERS ..... 17~18
TROUBLE SHOOTING 17
CARE AND MAINTENACE 17
MP3+G/CD/CDG CARE TIPS 18
SPECIFICATIONS 18

LOCATION OF CONTROLS

FRONT PANEL

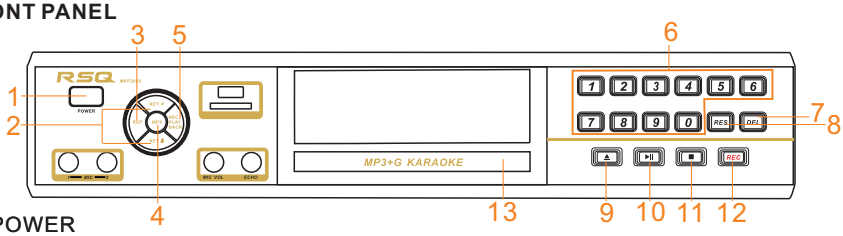

1. POWER
Turn on /off the Karaoke system.

2. KEY#/b
Press (#) to increase the pitch or press(b) to decrease the pitch of a song.

3. REPEAT
Press this key to play selected item repeatedly The screen shows as below:(The function is only walid when PBC is OFF.)
REP:[OFF] REP:[REP1] REP:[REP ALL]

4. MPX
Activates the multiplex function which switches to NORMAL(stereo) L-ch monaural and R-ch monaural.

5. RECORD PLAYBACK
Press to play latest record song automatically

6.Number keys(1 to 9,0)
Used to specify a track number for playing,changing,or programming .In PBC function operation.the number keys are additionally utilized for the selection of menu items.

7. DEL
Press to delete reserved song.

8. RES
Press to reserve a song.

9. OPEN
Press to open disc tray.

10. PLAY/PAUSE
Starts to play the disc or temporary suspendsplaying.by pressing this button consecutively.PLAY/Pause mode changed as shown bellow:

PLAY ⟶ PAUSE

11. STOP
Stops playing & recording

12. RECORD
Press to record a song.

13. DISC tray
Used to load a disc. To insert/remove a disc, press the OPEN button located at the right of the tray.

REMOTE CONTROL

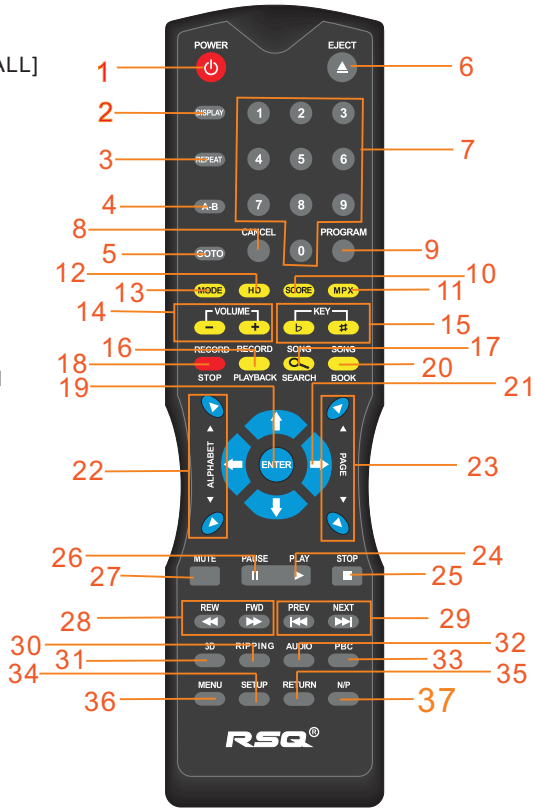

LOCATION OF CONTROLS

1. POWER button
Turn on/off the MP3+G/CD+G karaoke player.

2. DISPLAY
Utilized for operation with the PBC function.This button is used to return to menu screen during play.

3. REPEAT
Press this key to play selected item repeatedly The screen shows as below:(The function is only walid when PBC is OFF.)
REP:[OFF] REP:[REP1] REP:[REP ALL]

4. A-B
Press A-B first set location A: REPEAT: A-press again to set location B, and then playback will repeat during the two locations: REPEAT: A-B.Press A-B the third time to cancel the function and return to normal playback: REPEAT: CANCEL.

5. GOTO
During optical playback, press to perform a chapter, title or time search.

6. EJECT
Used to open and close disc tray.

7.Number keys(1 to 9,0)
Used to specify a track number for playing, changing,or programming.In PBC function operation.the number keys are additionally utilized for the selection of menu items.

8. CANCEL
Use to remove manus or status display from the screen.

9. PROGAM
Allow you to program a specific order. You can use up down left right to select the position where you edit. Press PLAY can play the specified program. And pressing CLEAR can clear all input number. You also can move HIGHLIGHT to the position of PLAY and CLEAR, and then you can use “SELECT” to execute its function.

10. SCORE
Activate Score function

11. MPX
Activates the multiplex function which switches to NORMAL(stereo) L-ch monaural and R-ch monaural.

12. HD

13. MODE
Press to change MEDIA
[DISC→ CARD→ Flash Drive].

14. VOL+/-
Increase or decrease the volume of analog audio output.

15. KEY+/-
Press (#) to increase the pitch or press(b) to decrease the pitch of a song.

16. RECORD PLAYBACK
Press to play latest recorded song auto matically

17. SONG SEARCH
Activate song search UI

18. RECORD
Play & Record Operation Pricedures:
a.At MP3+G Mode,load Disc or Flash Drive,select song Title from the song list and press[PLAY];
b.If user wants to sing the song and record his Vocal with the Music then press the [RECORD] button screen shows[FLASH DRIVE Ready];User can start singing into the Microphone and record.When finish;
c.Press [RECORD] or [stop] to stop recording

19. ENTER
Press to reserve the selected songs.

20.SONG BOOK
Create a song book list automatically as a text file.

21. Direction (▲ ▼ ◀ ▶)
Used for navigation within a selection menu.

22. ALPHABET [UP][DOWN]
Press ALPHABET[UP] to Move (A — Z
Press ALPHABET[DOWN] to move(Z —A)

23. PAGE [UP][DOWN]
Press PAGE[UP] to move previous page.
Press PAGE[DOWN] to move nest page

24. ▶PLAY
Starts to play the disc with/without theplayback control function.

25.STOP
Stops playing & recording

LOCATION OF CONTROLS

26. ⏸PAUSE
Temporarily suspends playing. Video motion freezes and audio reproduction stops.

27. MUTE
Press to mute and cancel muteness

28.⏪REV and⏩FWD
Press ⏪ REV/FWD⏩to go into fast forward/fast reverse status.

29.⏮ PREV and ⏭ NEXT
Press to skip to next or previous track. see page 10 for detail.

30. RIPPING
Press to Ripping CD+MP3+G DISC file.

31. 3D

32. AUDIO

Activates the multiplex function, which switches to NORMAL(stereo),L-ch monaural and R-ch monaural.

33. PBC
this function is only availble for video-CD version 2.0 or higher.The PBC function may differ by disc.with PBC ON,you can select items in the menulist using the PREVIOUS/NEXT keys and numeral keys,When PBC OFF,you cannot select items in the menu listbut you can use the numeral keys directly or the PREVIOUS and NEXT keys.

34. SETUP
Press to get into SETUP menu.

35.RETURN
Press DISPLAY, the screen shows as follows according to the disc:
Press DISPLAY the first time, and the screen shows the disc type, total item number, playing item, PBC status and playing time of the item. when you press DISPLAY again, the screen will shut down.

36.MENU

for Video-CD version 2.0 or higher.The PBC function may may differ by disc. with PBC ON,you can select items in the menu list using the PREVIOUS/NEXT Keys and numerral keys,when PBC OFF,you cannot select items in the menu list but you can use the numeral keys directly or the PREVIOUS and NEXT keys.For disc,you can enter main menu,the menu funtion may differ by disc.

37. N/P
Change TV mode between NTSC ⟷ PAL

Putting batteries in the remote control

The battery compartment is located on the back of the remote control.

1.Open the lid of the remote control attery compartment.

2. Insert two size-AAA batteries. Ensure that the batteries are inserted with the positive and negative terminals in the correct direction corresponding to the (+) and (-) marks in the battery compartment.

3. Install the lid of the remote control battery compartment.

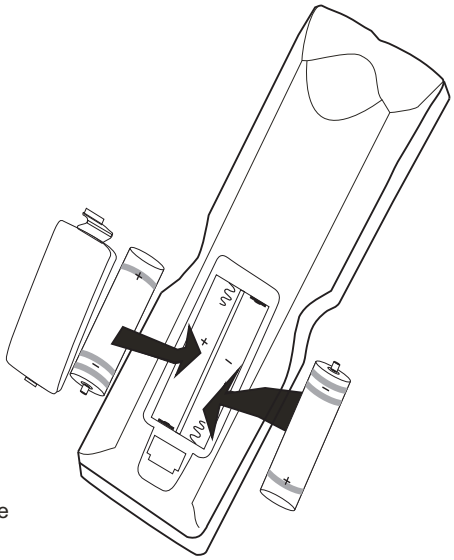

CONNECTIONS

INSERTING USB FLASH DRIVE/CARD

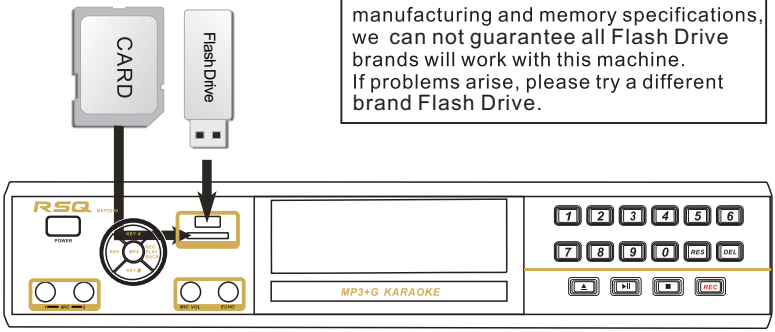

Note:
Due to variances in Flash Drive manufacturing and memory specifications, we can not guarantee all Flash Drive brands will work with this machine.
If problems arise, please try a different brand Flash Drive.

CONNECTING TO AUDIO AND VIDEO COMPONENT

- The below illustration demonstrates how to connect your RSQ MPK-2000 player to your TV. Connecting to a TV allows lyrics to be shown on screen when playing CDG or MP3G songs.Audio will come through the TV speakers. Or, for better sound, connect audio cables to your stereo or amplifier. Adjust volumes accordingly.

- IMPORTANT: When connected to a TV, the TV channel must be changed to an input channel like AV1, AV2, Video1, Video2, Aux, etc. It will never be channel 2, 3, 4, 5, etc.

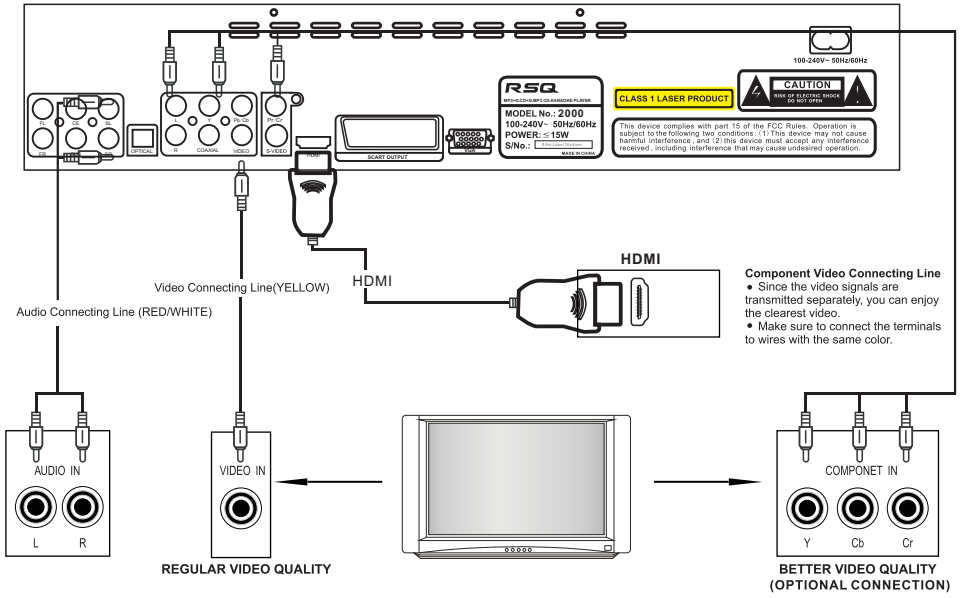

CONNECTIONS

POWER CONNECTION

When you have completed all other connections, plug your system's power cord into a standard AC outlet.

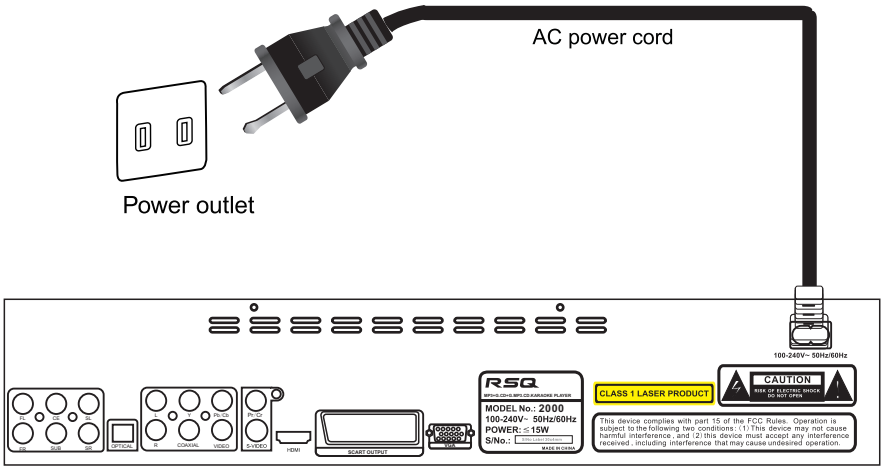
AC power cord
Power outlet
100-240V~ 50Hz/60Hz
RSQ
MODEL No.: 2000
100-240V~ 50Hz/60Hz
POWER: ≤15W
S/No.:
CLASS 1 LASER PRODUCT
CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
OPTICAL
COAXIAL
VIDEO
S-VIDEO
HDMI
SCART OUTPUT
VGA

NOTE:

- Line voltage
  RSQ MKP-2000 has universal power supply : 100V~240V, 50/60Hz.
- Warning: To avoid electrical shock, do not connect the system to AC power until all other connections are completed.
- Caution: Make sure the voltage of the AC outlet matches the requirement of your karaoke system.

BASIC OPERATIONS

PLAYING DISCS

1. Press POWER to turn on the system.

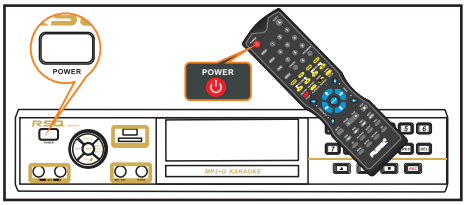

2. Press OPEN/CLOSE on the front panel or remote to open the tray door.

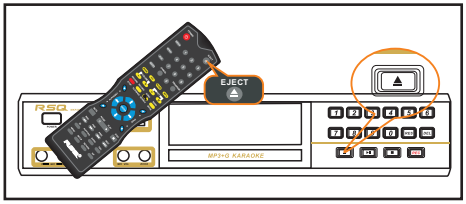

3. Place a disc in the compartment tray over the center hub, with the label facing out.

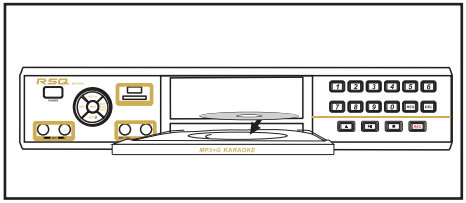

4. Push back the tray door to close the compartment.

5. MP3+G song list or CD Title display will show up on screen.

To temporarily stop play, press PLAY/PAUSE.

To resume play, press PLAY/PAUSE again.

Note:

- Do not apply excessive force to the tray door, or press the door while a disc is playing
- Never place anything except a compact disc in the disc tray. Foreign objects can damage the player. Never place more than one disc on the disc tray at a time.
- During playback, if the system is subject to a sudden shock or jolt, the speed of rotation might change or some noises might be produce along with distortion of graphics. This is not a malfunction.

KARAOKE MICROPHONE COMTROLS

This player comes with a microphone and two microphone inputs.Connect microphone to either Mic1 or Mic2 jack and adjust volume accordingly. Microphones are readily available in most electronic stores.If purchasing another microphone, request a microphone with a standard 6.3mm (1/4") cable end. A second microphone is great to have around for duets or a spare if one microphone gets damaged.

Note: The microphone supplied with this player is unidirectional. The singer must sing clearly into the top of the microphone, not the sides. Unidirectional microphones limit ambient noises that can be picked up by audiences and environmental sounds.

Plug a microphone into either MIC1 or MIC 2 SOCKET

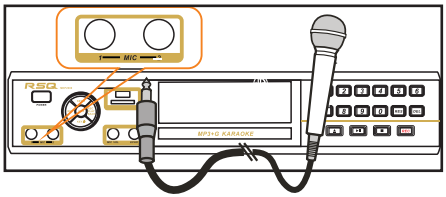

KARAOKE

When a microphone is plugged into MIC 1 and MIC 2, the system mixes the music with your voice.

1. Press POWER to turn on the system.The green light turns on.
2. Load a Karaoke Disc in the CD compartment.
3. Press PLAY/PAUSE to start play.
4. Adjust MASTER VOLUME on the remote controller to the desired listening level.
5. Adjust Microphone volume on the remote controller to the desired singing level.
6. Sing directly into the microphone along with the music. While playing a karaoke disc, you can read the lyrics of the songs, (MP3+G, CD+G only) which appear on the TV monitor.
7. Adjust ECHO level on the remote controller to the desired singing level.

BASIC OPERATIONS

SKIPPING TRACKS

While the disc is stopped, you can skip up or down to select a specific track by pressing PREV ⏮ / NEXT ⏭ . To play the selected track, press PLAY.
While a disc is playing, press PREV ⏮ once to skip back to the beginning of the current track.
Repeatedly press PREV ⏮ to search backward to the beginning of the desired track.
Repeatedly press Next ⏭ to search forward to the beginning of the desired track.

SEARCH PLAY

While the disc is playing, press REV ◀◀ / ▶▶ FWD to search backward or forward. Press PLAY to resume the normal playback.
Each time the REV ◀◀ /FWD ▶▶ button is pressed, the speed of backward/forward search changes at speed: x2, x4, x8, x20.
Note: These functions can not be used, when playing MP3+G/CD+G.

PROGRAMMED PLAY

MP3+G/CD+G/CD/MP3/VCD PROGRAMMING

1. Press PROGRAM on the remote control, the program menu appears on the TV screen.

2. Use the navigation keys (▲/▼/◀/▶) to select the track for CD+G/CD/MP3/VCD and press OK, the track or title/chapter is added in the program st.

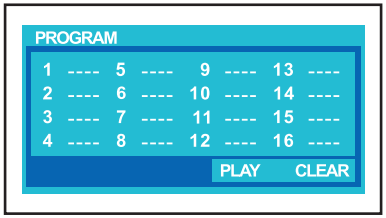

Note: Song will be reserved on the waiting list directly on MP3+G

3. Repeat the above steps to add more tracks title/chapter in the program list.

4. Press PLAY/PAUSE or highlight the PLAY on the screen and press OK to start programmed playback.

Programmed Play automatically stops at the end ofthe last programmed track or title/chapter.
Highlight the CLEAR on the screen and press OK to delete the entire programmed. sequence.

Note: These functions only be used when playing in MP3+G/CD+G/CD/MP3/VCD

REPEAT PLAY

While playing a disc, press REPEAT on the remote control repeatedly to choose a repeat play mode.

VCD/SVCD/CD/CDG/MP3+G Karaoke disc

Repeat off → Repeat one track → Repeat all tracks → Repeat off

MP3/JPEG

Repeat off → Repeat one track → Repeat all → Repeat DIR → Repeat off

REPEAT A SPECIFIC SECTION

A-B repeat playback allows a specific section to be repeated.

- While the disc is playing, press A-B button to set the beginning of the section (point A) to be played repeatedly.
- Press A-B button again to set the end of the section (point B) to be played repeatedly.
- The unit will then immediately begin replaying the selection (A to B) repeatedly.

Press A-B button again to clear the programmed repeat playback and return to normal playback.

FLIPPING AND ROTATING STILL PICTURE

Press the navigation keys (▲/▼/◀/▶) to flip the still picture on the TV.

▲ : flip the picture vertically.
▼ : flip the picture horizontally.
◀ : rotate the picture 90 ◦counter-clockwise.
▶ : rotate the picture 90 ◦clockwise.

KARAOKE OPERATIONS

KARAOKE PLAY

① Start up screen (MP3+G)

when insert MP3+G disc, Above start up screen will be show in the TV screen

② Play a karaoke song

Use [UP] and [DOWN] arrow key then press [Play] Selected song will play with lyric.

SONG SEARCH (MP3+G Only)

① Song Title: Press [SONG SEARCH] on the Remote Control, Virtual Key board will be shown on TV Screen. Then, You type into Song title which you desired to find and enter play.
To enter CANCEL, Virtual Keyboard will be cancelled.

② To Press Alphabet [UP] and [DOWN] on the Remote Control. song list will be shown by alphabet.

③ To Press Page [UP] and [DOWN] on the Rerote Control, song list will be shown by page.

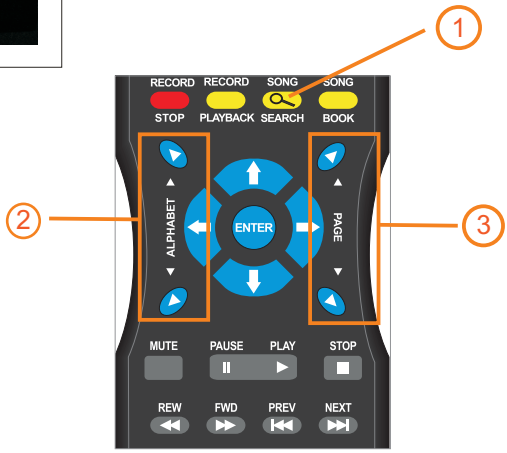

KARAOKE OPERATIONS

SONG RESERVATION

Use [UP] and [DOWN] arrow Key then Press [ENTER]
Selected Song will be reserved automatically.

Total Number of reserved song.

DIRECT ACCESS

Press [song number] and [PLAY], a song which you desired to play directly.

RECORD A SONG

① MP3+G
a. Select Song Which you want then
b. Press [RECORD] to start recording
c. Press [RECORD] or [STOP] to record recording.

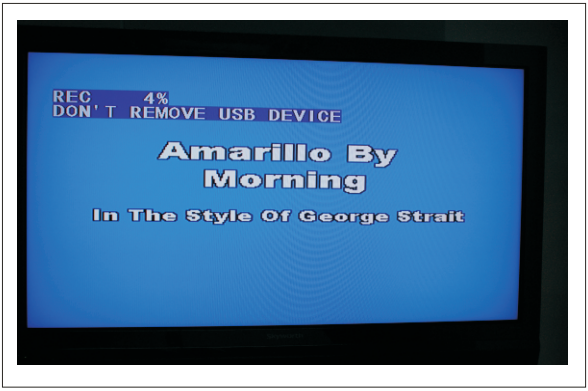

KARAOKE OPERATIONS

② CD+G

a. Play Song Which you with first.
b. Press [RECORD] while playing to start record
c. press [RECORD] or [STOP] to stop recording

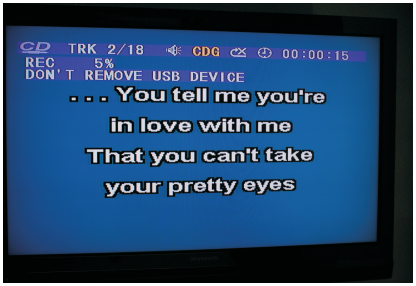

Note: All recorded song will be stored [RECORD SONG] Folder MP3+G
Recorded song will be stored ongiral file name
CD+G/CD Recorded Song will be stored "Track#"

RECORD PLAYBACK

After recording, Press [RECORD PLAYBACK] Screen will show all recorded songs then automatically play latest recorded song.

KARAOKE OPERATIONS

RIPPIING FUNCTION

① MP3+G DISC
After insert and play MP3+G disc, press Ripping ,it will takes few seconds.

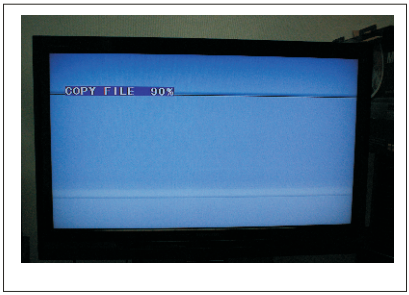

② CD+G DISC: After insert CD+G disc, then press Ripping.

a. screen will show to

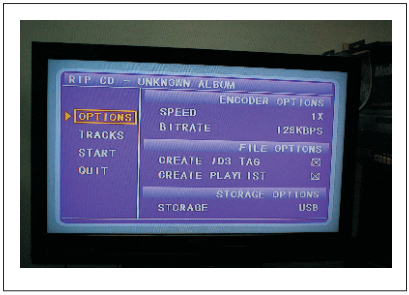

c. After select a track, press ⇨ screen will show on.

then you can type song name by yourself.

b. select a track you desired to

d. press START.

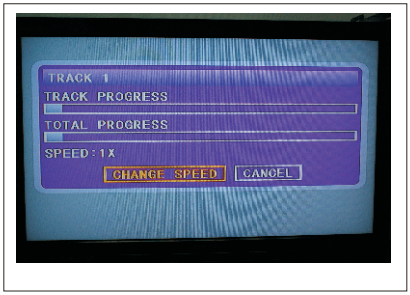

KARAOKE OPERATIONS

CREATE SONG LIST

Step 1
Put Mp3 Or Mp3+G
Disc Into Karaoke Player Tray

Step 2
Insert Flash Drive Into (CARD)
Flash Drive Slot Respectively.

Step 3
Press [SONG BOOK] button to create song list to flash drive.

Step 4
Insert The Flash Drive (CARD)
With Created Song List Into Computer

Step 5
Find A Txt Format File With Contents Of SongList Shown As Below In Flash Drive

[0001] 900 MILES.MP3
[0002] ABSOLUTELY (STORY OF A GIRL).MP3
[0003] ALEXANDERS RAGTIME BAND.MP3
[0004] ALL STAR.MP3
[0005] AMARILLO BY MORNING.MP3
[0006] AMAZING GRACE.MP3
[0007] AND STILL.MP3
[0008] BICYCLE BUILT FOR TWO.MP3
[0009] BILL BAILEY WONT YOU COME HOME.MP3
[0010] BREATHE.MP3
[0011] CAMPTOWN RACES.MP3
[0012] CELEBRATION.MP3
[0013] CLEMENTINE.MP3
[0014] COULD IT BE IM FALLING IN

Step 6
Print Song List From Txt File,Modify It And Create You Own Song Book.

OTHERS

TROUBLE SHOOTING

If you have problem operating your MP3+G/CD/CD+G Karaoke System, use this chart to determine the problem and find possible solutions.

Problem	Possible Cause	Solution
The karaoke system does not work.	No power	Make sure the properly plugged into an AC outlet.
No sound or No Voice	MASTER VOLUME or MIC VOLUME is set to the lowest setting.	Increase MASTER VOLUME or MIC VOLUME.
	MUTE on.	Select MUTE off.
	Bad Microphone or connection.	Contact MIC Dealer or Check MIC cable connection.
No song lyrics appear on screen. (MAKE SURE THAT THE DISC CONTAINS GRAPHICS OR IMAGES) ex) CD+G, MP3+G	Video cable is not connected properly to the TV.	Connect the video cable from player's VIDEO OUT to the TVs VIDEO IN. Set AV source selector to connected AV IN on TV/ Monitor.
The disc skips or will not play	The disc is loaded upside down.	Reload the disc.
	The disc is dirty or defective.	Clean the disc, or try a different disc.
	Moisture has condensed on the pick up lens.	Unplug the system and with 1 hour for the moisture to evaporate.
USB Doesn't Work	Check Your USB, We can't guarantee to read & play for the un-authorized USB memory.	Please check with your local memory dealer. Try a different USB brand.
Remote Controller Doesn't Work	No Battery.	Put 2 AAA Battery.
	Battery Run Out.	Change Battery.

CARE AND MAINTENANCE

1. Keep your karaoke player dry; if it gets wet, wipe it dry immediately. Use and store the karaoke only in normal temperature environments. Handle the karaoke player carefully; do not drop it.

2. Keep the karaoke player away from dust an dirt, and wipe it with a damp cloth occasionally to keep it looking new.

OTHERS

MP3+G/CD/CDG CARE TIPS

Even though these compact discs are durable, treat the disc surface with care.
Do not store the discs in high temperature or high humidity areas. They might warp.
Keep the discs dry. Water droplets can act as a lens and affect the laser beams focus.
Always hold a disc by its edge to avoid fingerprints.
Always keep it in its protective case or sleeve when it is not in use. Fingerprints and scratches on the CDs surface can prevent the laser beam from correctly reading the digital information.

Note:
All copy rights of contents playing in this unit, is not related to manufacturer.

SPECIFIATIONS

Power Source	100V-240V~, 50/60Hz (Auto Volt)
Power Consumption	≤15W
Video	Component (Y, Cb, Cr), Composite Video, Choice of Screen Ratio (16:9/4:3), PAL/NTSC Disc Compatible, Progressive Scan (500-p)
Audio	Output level: 0Vrms~1.5Vrms DA Converter: 24 bit, Frequency Response: DVD (PCM 96Khz): 2~44Khz(+/- 0.5 dB) S/N ratio: 100 dB (DVD), above 98dB (CD), Total Harmonic Distortion: 0.003%
Operating Temp	+5~+38 deg., 10%~75% (humidity)
Multimedia Source	MP3+G,CD+G, CD,VCD, JPG
Interface	2.0 port for MP3/JPG playbacks and JPG viewing
Weight	1.8 Kg
Dimensions	430(W)X230(D)X82(H)mm

RSQ®

Since 1997 USA

13855 Redwood Ave.Chino CA 91710 U.S.A.
www.rsqaudio.com